


ASSEMBLY INSTRUCTIONS FOR YOUR RICO ESPINET OVO FLUSH MOUNT

IMPORTANT SAFETY INSTRUCTIONS:

- * These instructions are provided for your safety.
- * It is very important that they are read completely before beginning the installation of your fixture.
- * **WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- * Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- * This fixture is UL rated for damp locations.

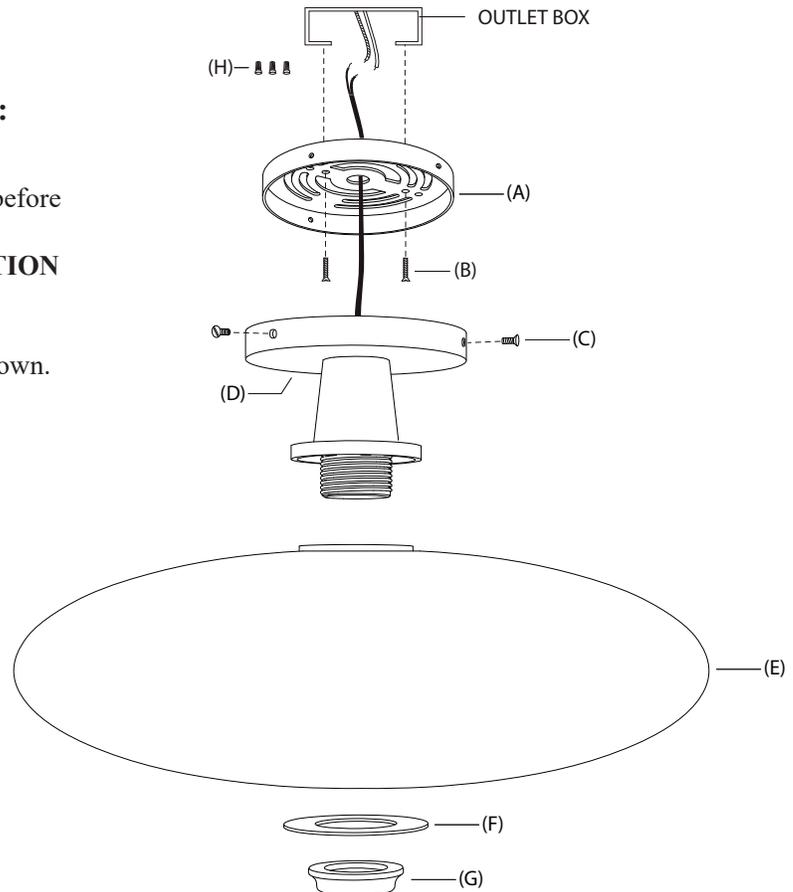

ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Remove all parts from the carton. Do not throw away any parts.
3. Remove mounting plate (A) from canopy (D) by removing screws (C). Set screws (C) aside.
4. Carefully pull wiring from outlet box. Guide wires through center hole in mounting plate (A).
5. Affix mounting plate (A) to outlet box using screws (B), provided.
6. Lift canopy (D) to outlet box and make proper electrical connections described in steps 7 - 9.
7. Connect ground wire from fixture to ground wire in outlet box. Fasten wires together with wire nut (H) and wrap connection with electrical tape.
8. Attach hot wire from fixture to hot wire from outlet box. Fasten wires together with wire nut (H) and wrap connection with electrical tape.
9. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (H). Wrap connection with electrical tape.
10. Carefully push wire connections back through hole in the center of mounting plate (A). Slide canopy (D) over mounting plate (A). Align holes in canopy (D) with threaded holes in mounting plate (A). Thread screws (C) into holes in mounting plate (A) to secure fixture to ceiling.
11. Remove washer (F) and threaded collar (G) from socket.
12. Slide glass shade (E) (with the lip facing up) over the threaded socket. The lip of the glass will check inside the housing of canopy (D). Secure glass shade (E) to canopy (D) by placing washer (F) against glass shade (E) and securing with threaded collar (G).
11. Install one 100W MAX incandescent or 13W LED, Type A bulbs into the socket.
12. Reconnect main electrical supply from the fuse box/circuit breaker and test the fixture.