


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 49675	NAME: Violetta Lamp
MATERIAL TYPE: Iron	FINISH: Matte Black
SOCKET TYPE: E26	SOCKET QTY: 2
BULB WATTAGE: 40W/CFL 10W/LED 9W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 8LBS

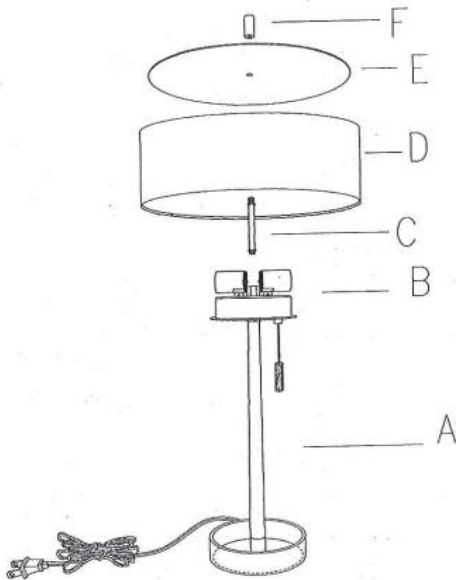

## PARTS INCLUDED:

Body ( A )	Qty: 1
Socket Assembly ( B )	Qty: 1
Pipe ( C )	Qty: 1
Metal Shade ( D )	Qty: 1
Diffuser ( E )	Qty: 1
Finial ( F )	Qty: 1

## PRE-ASSEMBLY:

- Remove all parts and hardware from box along with any plastic protecting packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.



## TO ASSEMBLE:

1. Pull excess wire through the base before assembling the lamp.
2. Place the lamp body (A) on a flat surface.
3. Screw the pipe (C) onto the socket assembly (B).
4. Place shade (D) and diffuser (E) (both packed in another carton) onto the pipe (C) and then tighten the finial (F) clockwise to secure the shade.

## CARE INSTRUCTIONS:

- Clean with soft, dry cloth.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the lamp.

## IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other) (For North America Customers Only). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way. This instruction is provided for your safety. It is important that it is read carefully and completely before assembling the fixture.

To avoid risk of fire, do not exceed the recommended wattage.

## WARNING:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing the bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

For customer service questions call 1-800-338-2150

ARTERIO RS